


WIA1005 Lab Task 1 Basic Connectivity (Week 4 – 5%)

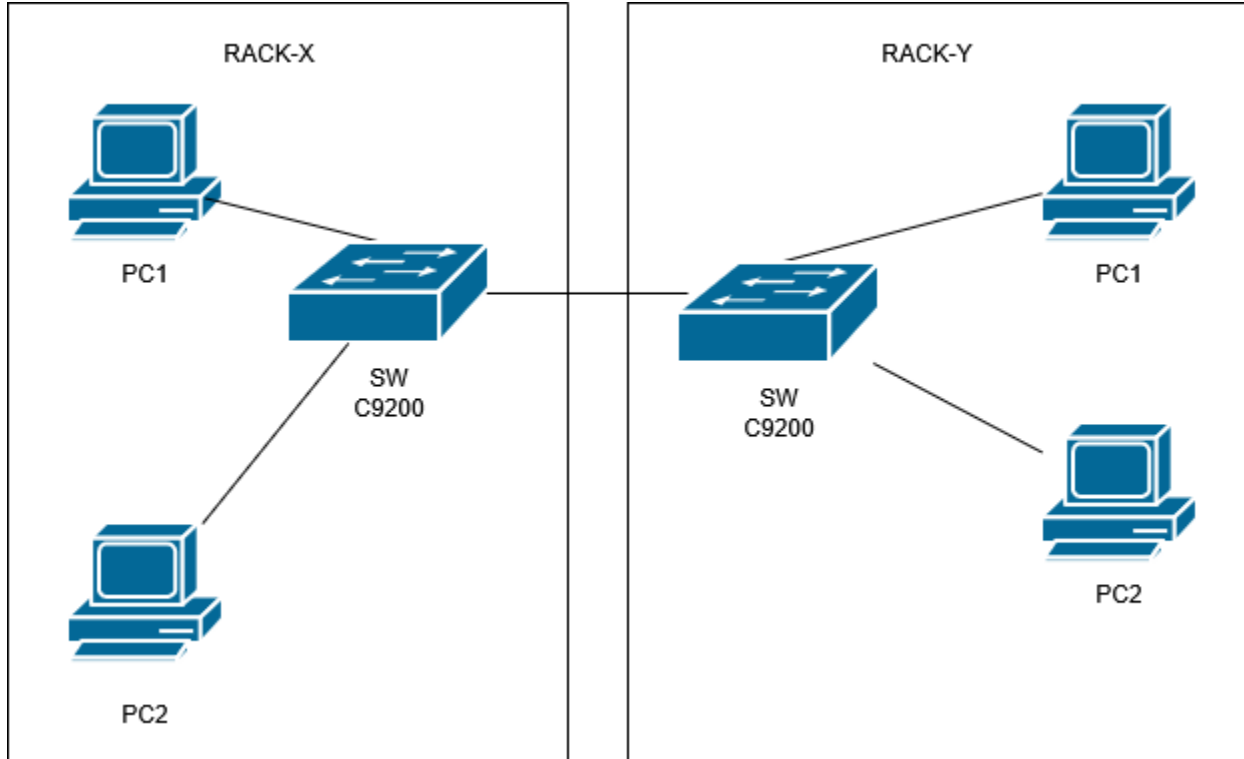

Duration : 1 Hour

In this activity, you will perform basic PCs and Switch configuration tasks.

- Connect the PCs and Switch based on the topology. X is your group and Y is other groups.
- Configure the IP addressing for PCs and Switch based on the IP Address information.
- Ensure that PC1 can ping PC2 and SW in the same rack.
- Ensure that PC1 can ping PC2 and SW in other racks.
- Ensure all group members understand the configuration tasks.

IP Address Information

SW

- IP : 10.26.1.23X (X is your rack number range from 1-8)
- Subnet Mask : 255.255.255.0

PC

- IP : 10.26.1.Z (Z is your PC number)
- Subnet Mask : 255.255.255.0